



Philips Norelco MultiGroom 3100 Casing Replacement

Remove the casing of the trimmer.

Written By: ahaharevolution



INTRODUCTION

This guide will show you how to remove the casing in order to access the battery and motor.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Power Button



- Remove the comb from the top of the trimmer.

Step 2



- Grip the attachment and twist it counterclockwise until you hear a click.
- Pull the attachment up to remove it from the trimmer.

Step 3



- Hold the trimmer upright so it is facing you.
- Insert the plastic opening tool in the gap at the top of the power button.

Step 4



- Apply pressure to pry off the power button.

Step 5 — Casing



- Insert the spudger into the bottom of the gray bezel and begin to gently pry it off.

i Separate the bezel one clip at a time so that the clips do not break.

Step 6



- Insert the spudger in the indicated hole and apply a tilting force to loosen the outer casing.
- Pull upward on the top of the inner housing to remove it from the outer casing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 12:13:59 PM.